

# tempmate®-XS

## Quickstart


 Start Button

 Green LED


 Red LED




01 Keep button pressed for minimum 5 seconds to start recording

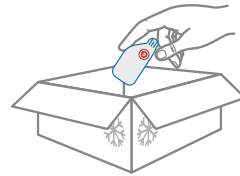

02 Add started **tempmate®-XS** to your shipment

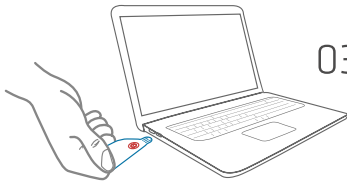

03 Connect stopped logger directly to USB port

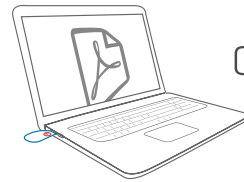

04 The PDF report will be generated automatically

 LED Indication



5 sec.

Start Logger  
Stop Logger



2 times

Set Mark  
Mark limit full



1 time

Not started  
Low battery  
Recording-OK  
Recording-Alarm  
Stopped-OK  
Stopped-Alarm  
Delay Start



## Notes

- When **tempmate®-XS** logger is stopped and connected to the computer the first time, both LEDs are flashing to indicate the PDF report is in process of generation. At this time, please do not unplug the logger until both LEDs are on, which indicates the finished PDF generation.
- A stopped **tempmate®-XS** logger cannot be started again.
- Do not place **tempmate®-XS** logger into corrosive liquid or expose to direct heat.
- The battery of **tempmate®-XS** loggers is a non-exchangeable CR2023 lithium metal button cell battery.
- Store **tempmate®-XS** loggers under room temperature conditions and do not use expired devices
- Please dispose **tempmate®-XS** loggers in accordance with local laws and regulations (electronic waste).
- To reprogram **tempmate®-XS** loggers, you need the **tempbase.-2** software.

For more information visit [xs.tempmate.com](https://xs.tempmate.com)

